

Single phase 60A latching Relay TP41-24



► Description

- Single Phase 60A Switching Capability;
- Multi-layer blades, Low temperature rise;
- Environment protection (Comply with ROHS);

Ordering information

TP41	24	C	12	D	①	D: Double Coil S: Single Coil
					②	Coil Voltage: 6,9,12,18,24,48 VDC
					③	Contact Material: AgSnO ₂
					④	Part No.: Single phase 60A Switching
					⑤	Type: Magnetic latching relay

Technical Data

► Coil data

Rated coil voltage	6V. 9V. 12V. 24V. 48V.	
Rated Power	Single Coil	1W
	Double Coil	2W
pulse Width	50 ms MAX	
pulse time	<30ms (at nominal voltage)	

► Contact data

Contact Material:	AgSnO ₂	
Contact arrangement	1A(B)	
Contact Resistance:	1.0mΩ Max.	
Max. Switching Voltage:	253 VAC	
Max. Switching Current:	60A	
Max. Switching Power:	13200VA	
Life	Mechanical Life	1×10 ⁵ OPS
	Electrical Life	1×10 ⁴ OPS

► Standard windings


Nominal voltage (VDC)	Operating voltage range MAX. (VDC)	Coil resistance ($\pm 10\%$)/ (Ohm)
Single Winding		
6	4.8	36
9	7.2	81
12	9.6	144
24	19.2	576
48	38.4	2304
Double Winding		
6	4.8	18+18
9	7.2	40.5+40.5
12	9.6	72+72
24	19.2	288+288
48	38.4	1152+1152

NOTE: Others nominal voltage required, special ordering allowed.


► Characteristics

Insulation Resistance:	1000M Ω	
Dielectric strength	Between Contact and Coil	4000V 1Min.
	Between Open Contact	1800V 1Min.
Creepage Distance:	8 mm	
Shock Ristance:	147m/s ²	
Vabration Resistance:	10HZ-55HZ amplitude 1.5mm	
Ambient Temperature:	-40 $^{\circ}$ C...+85 $^{\circ}$ C	
Weight:	APPROX.45g	
Contruction:	Dust protection	


Outline dimensions and circuit diagram

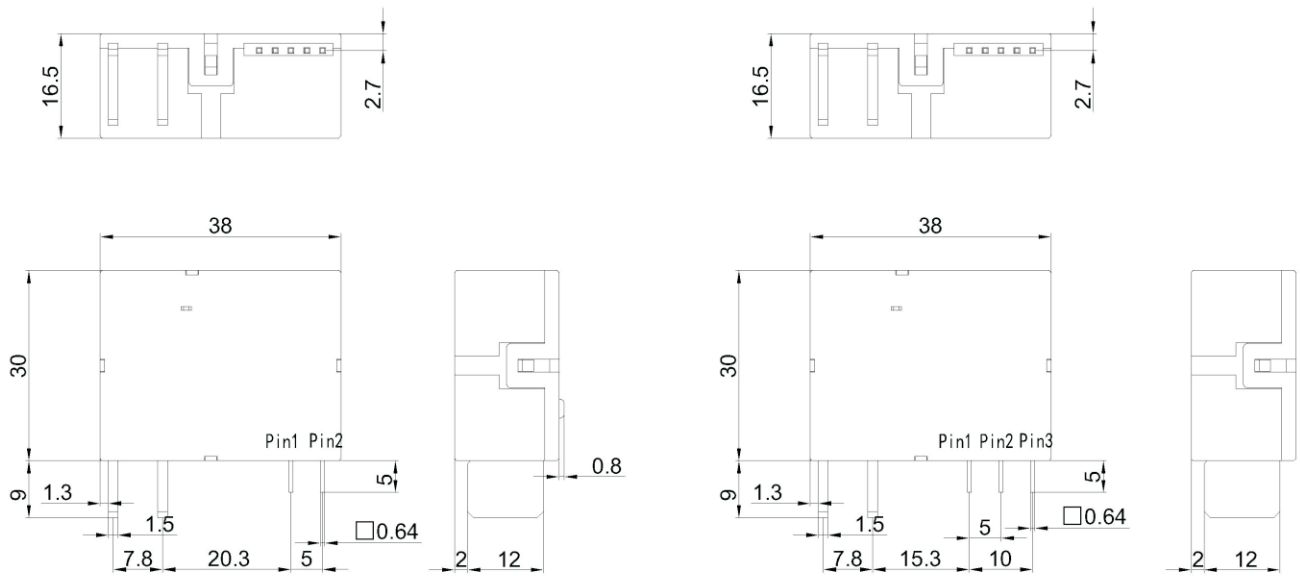

Wiring diagram

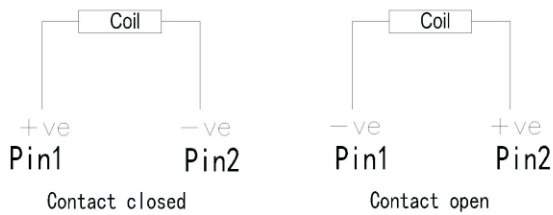

Wiring diagram

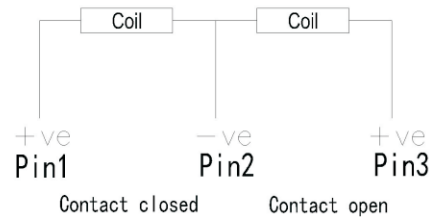

Remark: The tolerance didn't mark on drawings. When dimension is $\leq 1\text{mm}$, the tolerance should be less than $\pm 0.2\text{mm}$; when dimension is between 1-5mm, the tolerance should be less than $\pm 0.3\text{mm}$; When dimension is $\geq 5\text{mm}$, the tolerance should be less than $\pm 0.5\text{mm}$.

Note:

1. The default status of the relay contact is closed (Reset), it may change to "open" due to transit or relay mounting, please check the contact status when using, and reset the relay contact status on request if necessary.
2. In order to make sure the contact "open" or "closed" status, the excitation voltage should reach to rated voltage, but the excitation time should not over 1 minute. For double coil relay, do not apply the voltage to both coils at the same time.
3. The terminals relay without twisted copper cable can not be tin soldered, can not be wrenched too.
4. Please do not use the relay which has been tested for electrical endurance testing.