# Single phase 100A latching Relay TP41-30



- Description
- Single Phase 100A Switching Capability;
- Multi-layer blades, Low temperature rise;
- Low contact resistance;
- Customized shunt, copper braid cables;
- Environment protection (Comply with ROSH);

## Ordering information

TP41 30 C 12 D (	D: Double Coil S: Single Coil
2	Coil Voltage: 6,9,12,18,24,48 VDC
3	Contact Material: AgSnO <sub>2</sub>
	Part No.: Single phase 100A Switching
	Type: Magnetic latching relay

### **Technical Data**

#### Coil data

Rated coil voltage	:	6V. 9V. 12V. 24V. 48V.
Rated Power	Single Coil	1.5W
	Double Coil	2W
pulse Width		50 ms MAX
pulse time		<30ms (at norminal voltage)

#### Contact data

Contact	: Material:	AgSnO <sub>2</sub>
Contact arrangement		1A(B)
Contact Resistance:		1.0mΩ Max.
Max. Switching Voltage:		253 VAC
Max. Switching Current:		100A
Max.Sv	vitching Power:	19800VA
Life	Mechanical Life	1×10 <sup>5</sup> OPS
	Electrical Life	$1 \times 10^4$ OPS

## Standard windings


Nominal voltage (VDC)	Operating voltage range MAX. (VDC)	Coil resistance (± 10%)/ (Ohm)
Single Winding		
6	4.8	24
9	7.2	54
12	9.6	96
24	19.2	384
48	38.4	1536
Double Winding		
6	4.8	12+12
9	7.2	27+27
12	9.6	48+48
24	19.2	192+192
48	38.4	768+768

NOTE: Others norminal voltage required, special ordering allowed.

## Characteristics

Insulation Resistanc	e:	1000MΩ	
Dielectric strength	Between Contact and Coil	4000V 1Min.	
	Between Open Contact	2000V 1Min.	
Creepage Distance:		8 mm	
Shock Ristance:		147m/s2	
Vabration Resistance:		10HZ-55HZ amplitude 1.5mm	
Ambient Temperature:		-40℃+85℃	
Weight:		APPROX.80g	
Contruction:		Dust protection	

### Outline dimensions and circuit diagram

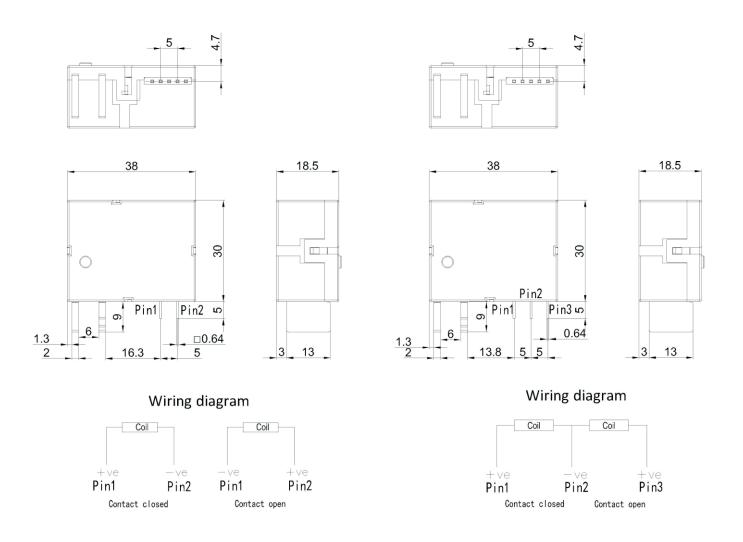

Remark: The tolerance didn't mark on drawings. When dimension is  $\leq 1$ mm, the tolerance should be less than  $\pm 0.2$ mm; when dimension is between 1-5mm, the tolerance should be less than  $\pm 0.3$ mm; When dimension is  $\geq 5$ mm, the tolerance should be less than  $\pm 0.5$ mm.

Note:

- 1. The default status of the relay contact is closed( Reset), it maybe change to "open" due to transit or relay mounting, please check the contact status when using, and reset the relay contact status on request if necessary.
- 2.In order to make sure the contact "open" or "closed" status, the excitation voltage should reach to rated voltage, but the excitation time should not over 1 minute. For double coil relay, do not apply the voltage to both coils at the same time.

3. The terminals relay without twisted copper cable can not be tin soldered, can not be wrenched too.

4. Please do not use the relay which has been tested for electrical endurance testing.